



MOTOKRZR™ maxx K3

3G

USER MANUAL

 


MOTOMANUAL

www.motorola.com.hk


WELCOME

Introducing your new **MOTOKRZR™** maxx K3 3G wireless phone. Here's a quick anatomy lesson.

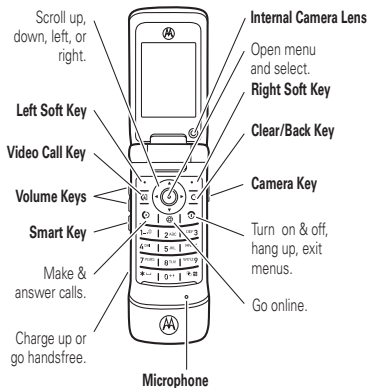


*Make sure your fingers do not cover microphone during calls.

 Note: All the illustrations, simulated screen and related images used in this manual are for reference only. There may be slight difference between the handset and keys and content of display used in this manual and those of your handset. Please refer to your handset for actuality.

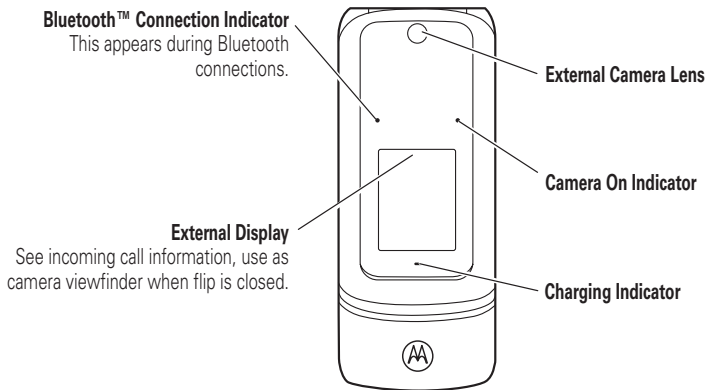


To change your automatic key lock, see page 54.

Note: All the illustrations, simulated screen and related images used in this manual are for reference only. There may be slight difference between the handset and keys and content of display used in this manual and those of your handset. Please refer to your handset for actuality.

Note: The display of the softkeys may be different if you subscribe SCREEN3™ service. SCREEN3™ is a subscription-dependent feature and is not available in all regions. Please contact your service provider for more details. After activating SCREEN3™, you may not be able to use  to open the main menu. Please use the right soft key Main Menu to open it.

Home Screen





② Press the Center Key  key to open the **Main Menu**.

① Press and hold the **Power Key**  for a few seconds or until the display lights up to turn on your phone.


Main Menu



③ Press the Navigation Key **up, down, left, or right** () to highlight a menu feature.

④ Press the Center Key () to select it.

Note: All the illustrations, simulated screen and related images used in this manual are for reference only. There may be slight difference between the handset and keys and content of display used in this manual and those of your handset. Please refer to your handset for actuality.

Note: The display of the softkeys may be different if you subscribe SCREEN3™ service. SCREEN3™ is a subscription-dependent feature and is not available in all regions. Please contact your service provider for more details. After activating SCREEN3™, you may not be able to use  to open the main menu. Please use the right soft key Main Menu to open it.

Mobile Devices Business
(852)2506-3888 (Hong Kong)

www.motorola.com.hk (Hong Kong)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners. © Motorola, Inc. 2007.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software.

Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals from our Motorola web site, at <http://www.motorola.com.hk>.

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature is functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Manual Number:6887460Z46

contents

menu map	7	your phone number	23	volume	51
Safety Information . .	9			navigation key	52
Use and Care	14	main attractions . . .	24	smart key	52
EU Conformance . .	15	Bluetooth™ wireless	24	external display . . .	52
Recycling Information		audio player	30	handsfree speaker .	53
.	16	voice commands . .	32	codes & passwords	53
essentials	17	photos	34	lock & unlock phone	53
about this guide . .	17	videos	36	53
SIM card	18	video calls	38	lock & unlock external	
battery	19	text messages	38	keys	54
turn it on & off . . .	21	memory card	40	customise	55
make a call	21	cable connections .	42	ring style	55
answer a call	21	phone updates . . .	43	time & date	56
store a phone number		basics	44	wallpaper	57
.	22	display	44	screen saver	57
call a stored phone		text entry	47	themes	58
number	22				

display appearance	58
answer options . . .	59
calls	60
turn off a call alert .	60
recent calls	60
redial	61
return a call	62
caller ID	62
emergency calls . .	62
voicemail	63
other features	64
advanced calling . .	64
phonebook.	68
messages	72
personalising	76
call times & costs*	78
handsfree	79
data calls*	80
network	82
personal organiser .	82
security	85

fun & games	85
MyMobileSoft.com	88
SAR Data	90
WHO Information .	91
index.	92

Note: The functions available on this handset may vary in different regions and nations. Please contact your local customer service centres, agencies or retailers if you have any question about the handset functions. Motorola reserves all rights to revise and change this user's manual without obligation to notify any person of such revisions or changes

* Indicates network or subscription-dependent features

menu map

main menu



Messages

- Create Message
- Message Inbox
- Outbox
- Drafts
- Email*
- Voicemail*
- Browser Messages*
- Info Services*
- Templates



Video Camera



Tools

- SIM Tool Kit *
- Calculator
- Calendar
- Alarm Clock
- Dialling Services
 - Fixed Dial *
 - Service Dial *
 - Quick Dial
- Voice Message
- World Clock



Settings

- (see next page)



Multimedia

- Media Finder
 - Music
 - Pictures
 - Videos
 - Voice Notes
 - Ring Tones
 - Wallpapers
- Themes
- Camera
- Video Camera
- Voice Record



Recent Calls

- (press the  or  to scroll through the call lists)



Connection

- Bluetooth™ Link
- USB Settings
- MOTOSYNC™ *



Phonebook



Games & Apps



Camera



WebAccess*



- Browser
- Bookmarks
- Stored Pages
- History
- Go to Page
- Browser Setup
- Web Sessions *



Bookmarks

* Indicates network or subscription-dependent features

This is the standard main menu layout. Your phone's menu may be a little different.

Tip: Press  to exit the current menu, or  to exit all menus.

settings menu



Personalise

- Home Screen
- Headlines*
- Main Menu
- Voice Dial setup
- Skin
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial*



Ring Styles

- Style
- style Detail



Connection

- Bluetooth™ Link
- USB Settings
- MOTOSYNC™ *



Call Divert *

- Voice Calls
- Video Calls
- Cancel All
- Divert Status
- Push to Call Fwd No.



In-Call Setup

- Date and Time
- In-Call Timer
- Call Cost Setup *
- My Caller ID
- Answer Options
- Call Waiting
- MSG Alert



Initial Setup

- Time and Date
- Video Inter Gateway Setup*
- Speed Dial
- Auto Redial
- Display Timeout
- Backlight
- Charging Lights
- Scroll
- Text Marquee
- Language
- Battery save
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available *
- User Accounts *
- Active Line *
- Battery Meter
- Download Location
- Storage Devices
- Voice Dial Languages
- Software Update*
- Other Information*



Headset

- Auto Answer
- Ringer Options
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-off Delay
- Charger Time



Aeroplane Mode

- Aeroplane Mode
- Prompt at Startup



Network

- New Network
- Network Setup
- Available Networks
- My Network List *
- Service Tone*
- Call Drop Tone



Security

- Phone Lock
- External Key Lock
- Lock Application
- Fixed Dial *
- Restrict Calls *
- Call Barring *
- SIM PIN
- SIM PIN 2 *
- Hide Private Entries *
- New Passwords
- Certificate Mgmt *



Java™ Settings

- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume

* Indicates network or subscription-dependent features

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.

- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the “Smart Practices While Driving” section at the end of this guide and/or at the Motorola Web site:
www.motorola.com/callsmart.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it

until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original batteries and chargers.**



Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.

Symbol	Definition
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

Don't drop your phone.

 
European Union Directives Conformance Statement

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

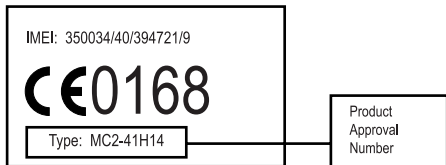

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Telephone and Accessories

Please do not dispose of mobile telephones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems have been set up to handle waste electrical and electronic items. Please contact your regional authorities for more details. If no suitable scheme exists, you may return unwanted mobile telephones and electrical accessories to any Motorola Approved Service Centre in your region.

essentials





about this guide



This guide shows how to open a menu feature as follows:

Note: If you have subscribed to SCREEN™3 service, you may have to press **Main Menu** key to access the menu.

Find it:  >  **Messages** > **Create Message**

This means that, from the home screen:

- 1 Press the *centre key*  to open the menu.
- 2 Press the *navigation key*  to scroll to  **Messages**, and press the *centre key*  to select it.

- 3 Press the navigation key  to scroll to **Create Message**, and press the centre key  to select it.

symbols



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

 
SIM card

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries. It can also contain your voicemail, text message, and Internet access settings. If you put your SIM card in another phone, that phone uses your phone number.

To insert and use a **memory card**, see page 40.

Turn off your phone and remove your battery before you install or remove a SIM card.

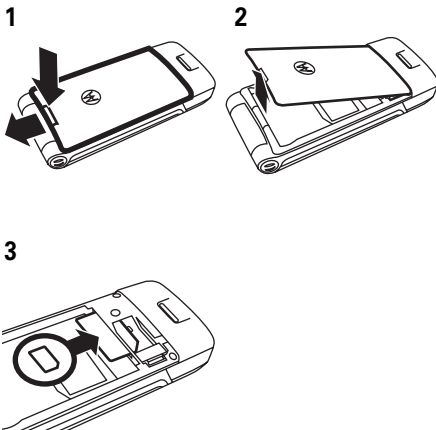

battery

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.



When storing your battery, keep it uncharged in a cool, dark, dry place.

- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

 


Contact your local recycling centre for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.


Before using your phone, read the battery safety information in the “Safety and General Information” section included in this guide.

battery installation

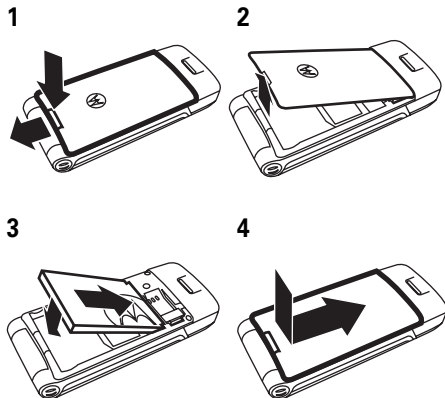

battery charging

 New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. Your display shows **Charge Complete** when finished. Your phone's battery charging indicator (see page 2) lights up while the battery is charging.

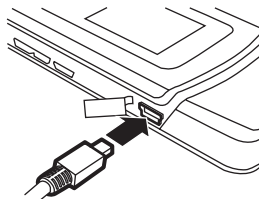


Tip: Your battery will perform best after you fully charge and discharge it a few times.

Note: The battery charger shipped with this device is designed for Motorola 3G mobile phones. Other chargers might take longer to


charge your battery, or cause your calls to fail during charging.

turn it on & off


Caution: Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**. Contact your service provider.


To turn on your phone, press and hold  for a few seconds or until the keypad or display lights up. If prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code.




To turn off your phone, press and hold  for a few seconds.

make a call


Enter a phone number and press  to make a call.


To “hang up,” close the flip or press .

To make video calls, see page 38.

Tip: Press and hold  to use voice commands, see page 32.


answer a call

When your phone rings and/or vibrates, just open the flip or press  to answer.

To “hang up,” close the flip or press .

store a phone number

You can store a phone number in your **Phonebook**:

- 1 Enter a phone number in the home screen.
- 2 Press the **Store** key.
Select **Create New Contact**, if necessary.
- 3 Enter a name and other details for the phone number. To select a highlighted item, press the *centre key* .
- 4 Press the **Done** key to store the number.

To edit or delete a **Phonebook** entry, see page 71.


To store an email address from the home screen, press  >  **Phonebook** then press **Options** > **Create New** > **Phone Contact**. Enter the new contact's name and **Email** information.





call a stored phone number

Find it:  >  **Phonebook**



- 1 Scroll to the phonebook entry.

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want.



- 2 Press  to call the entry.

Note: You can show contacts stored in your phone's memory or on your SIM card. To choose which contacts you see, press  >  **Phonebook**, then press **Options** > **View**. You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**. Contacts on the SIM card only have a **Name** and **Number**. To choose where you store contacts, go back to the home screen and press  >  **Phonebook**, then press **Options** > **Setup** > **Store Contacts to** > **Phone** or **SIM Card**.

your phone number

From the home screen, press
the clear key  then  to see your
number.

Tip: Want to see your phone number while
you're on a call? Press **Options > My Tel. Number**.

You can edit the name and phone
number stored on your SIM card. From
the home screen, press  , select an
entry, press the **View** key, press the **Options** key,
and select **Edit**. If you don't know your phone
number, contact your service provider.



main attractions

You can do much more with your phone than make and receive calls!

Bluetooth™ wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can also connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or

restricted in certain areas. Always obey the laws and regulations on the use of these products.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.


use a headset or handsfree car kit


Before you try to connect your phone with a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device).

Find it:  >  Connection > Bluetooth Link > [Add Audio Device]



Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list and press the *centre key* .
- 2 Press the **Yes** or **Ok** key to connect to the device.
- 3 If necessary, enter the device passkey (such as **0000**) and press the **Ok** key.

When your phone is connected, the Bluetooth indicator  shows in the home screen, and the external Bluetooth indicator light flashes.

You cannot play some copyrighted files over a Bluetooth connection.

Shortcut: When Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device, or move it near the phone. During a call or while playing a sound file, you

can press **Options** > **Use Bluetooth** to connect to a headset or handsfree device you have used before.

Tip: Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

copy files to another device

You can copy a media file, phonebook entry, calendar event, or Web shortcut from your phone to a computer or other device.



Note: You can't copy some copyrighted objects.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options**, then select:
 - **Manage** > **Copy** for media files.


- **Share** > **Contact** for phonebook entries.
- **Send** for calendar events.

3 Select a recognised device name, or **[Look For Devices]** to search for the device where you want to copy the file.

If your phone could not copy the file to the other device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection. To change a device's **Access settings**, see page 29.

receive files from another device

If you do not see the Bluetooth indicator  at the top of your phone display, turn on your phone's Bluetooth feature by pressing



 >  **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On**.

1 Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognise each other, place your phone in discoverable mode so the sending device can locate it. Press

 >  **Connection** > **Bluetooth Link** > **[Find Me]**.

2 Press the **Accept** key on your phone to accept the file from the other device.

Your phone notifies you when file transfer is complete. If necessary, press the **Save** key to save the file.

send files to a printer

You can use a Bluetooth connection to send a picture, message, phonebook entry, or calendar view from your phone to a printer.



Note: You cannot print message **Templates** or a phonebook **Message List**.

- 1 On your phone, scroll to the object that you want to print, then press **Options > Print > Bluetooth**. In the calendar, you can print the month, week, or day.







Tip: If you see it, you can print it. After you capture a picture in the camera, you can press the **Options** key and select **Print**.





- 2 If available, choose additional objects or print options.
- 3 Select a recognised printer name listed in the **Print Options** menu, or **[Print] > [Look For Devices]** to search for the printer where you want to print the object.


Note: If you see **Service Not Supported** when you try to print, select **Options > Manage > Copy > Bluetooth** instead. Always use this option to print 4x6 photos.






advanced Bluetooth features

A device is *recognised* after you connect to it once (see page 24).

features		
make phone visible to other device	Allow a Bluetooth device to discover your phone:  >  Connection > Bluetooth Link > [Find Me]	
connect to recognised device	Connect your phone to a recognised handsfree device:  >  Connection > Bluetooth Link > Found Devices > <i>device name</i>	




features		
drop connection with headset or handsfree device	 >  Connection > Bluetooth Link > Found Devices Scroll to the device name and press the Drop key.	
switch to headset or handsfree device during call	During a call, press Options > Use Bluetooth to switch to a recognised headset or car kit. Your phone connects automatically or shows a list of devices you can select.	

features	
play sound files on a recognised headset	<p>While playing a sound file, press </p> <p>Options > Listen via Bluetooth to switch to a recognised headset.</p> <p>Your phone connects automatically, or shows a list of devices you can select.</p> <p>You cannot play some copyrighted files over a Bluetooth connection.</p>
move multimedia object to device	<p>Caution: Moving an object deletes the original object from your phone.</p> <p>Scroll to the object, press </p> <p>Options > Manage > Move, select the device name.</p>



features	
copy multimedia object to device	<p>Scroll to the object, press </p> <p>Options > Manage > Copy, select the device name.</p>
edit device properties	<p> >  Connection </p> <p>> Bluetooth Link</p> <p>> Found Devices</p> <p>Scroll to the device name and press the <i>centre key</i> .</p> <p>Note: The Access settings can restrict how this device connects to your phone. You can choose Automatic (always connects), Always Ask (asks you before connecting), Just Once or Never.</p>

features

set Bluetooth options

 >  **Connection** 
> Bluetooth Link > Setup

Note: The **Bluetooth Connection Indicator** (see page 2) lights when your phone has a Bluetooth connection. To disable this indicator, choose **Bluetooth Lights > Off** under the **Setup** menu.

Press  up or down to scroll to an option, and press the *centre key*  to select it:

options

All Songs Show and play individual songs.

Note: All of your phone's songs appear in this list. Some songs do not have any **Artist**, **Album**, or **Genre** information, so they don't appear in those lists.

Recently Played Show songs you played recently.

Playlists Create or play a playlist (see page 32).

Artists Select an artist to show or play their songs.

Albums Select an album to show or play its songs.




audio player

Your phone can play and store AU, WMA, and MP3 song files. You can use a removable memory card with your phone to store more songs (see page 40).

Find it:  >  **Multimedia > Media Finder > Music**

options	
Genres	Select a type of music to show or play songs.
Composers	Select a composer to show or play songs.

When you select a song:

- **Play or pause** the song by pressing the *centre key* .
- **Skip back or forward** by pressing  left or right.
- **Change volume** by pressing the volume keys.
- **Hide the player** by pressing **Options** > **Hide**. This lets you use other phone features while the song plays. To stop the hidden audio player, press  in the home screen.

Tip: You can listen to music as you travel. Use Bluetooth™ A2DP enabled devices, such as stereo headphones, for enhanced music quality and use Bluetooth AVRCP enabled devices, such as car stereos, to control playback (see page 24). If you're on a plane, use a wired headset and *aeroplane mode* to make your phone safe to use (see page 90).

Your phone also has a **Ring Tones** player. To use it, press  >  **Multimedia** > **Media Finder** > **Ring Tones**.

play music with your phone closed

You can close your phone while you listen to music. When your phone is closed, the external display shows the song, artist, title, and time. To control your music playback:

- **Change volume** by pressing the volume keys.

- Press and release the **smart key** to show the track list. Press the volume keys to scroll through the list and select the track to be played.


load music files

To download songs from the Internet, see page 89. To copy files between your phone and a computer, see page 43.

Note: Your phone may not play MP3 files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

create a playlist

Find it:  >  **Multimedia** > **Media Finder** > **Music** > **Playlists** > **[Create New Playlist]**

Open a song list, and press the *centre key*  to select each song you want. After you press the **Done** key, enter a name for your list.

To hear your playlist, highlight it under **Playlists** and press **Options** > **Play**.

voice commands

You can use voice commands to make calls, and to open and use some phone applications.

Note: Not all phone languages support voice recognition and voice commands.

open applications

To open the **Camera** or **Voicemail** applications, **Redial** (dialled calls list), or **Received Calls** list:

- 1 Press and hold .

Your phone prompts you say a command.

- 2** Say one of the following commands:
“Camera,” “Voicemail,” “Redial” (dialled calls list), or “Received Calls”

Your phone opens the application.

make a call

You can use voice commands to make a call:

- Use **name dial** to dial a phonebook entry by speaking the entry’s name.
- Use **digit dial** to dial any phone number by speaking its digits.

Tip: Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.

- 1** Press and hold .

Your phone prompts you say a command.

- 2** Say “name dial” or “digit dial”

- 3** When prompted, say the name of the phonebook entry or speak the digits in the phone number.



If your phone recognises the name or number, it makes the call.

Note:

- Your phone may prompt you to repeat a name or number. If the name/number isn’t valid, the phone doesn’t make the call.
- If the phone does not recognise the name or number, the display shows a list of names/numbers, asks, “Did you say ...,” and highlights the first item in the list. Say “Yes” to call the

highlighted number, or “No” to go to next list item.


To select the name or number manually, scroll to the name/number on the list and press the **Select** key.

- You can improve voice dial operations by training the phone to recognise your voice. Press  >  **Settings** > **Personalise** > **Voice Dial setup** > **Adapt digits**.

 
photos

To view, edit, or delete photos you’ve taken, see page 88.


Your camera lens is on the back of your phone when the phone is open.

Note: Below your phone’s external lens is a **camera on indicator**. This can blink when your camera is on, to let people around you know that they might be in your photo or video. 

- 1 Press  >  **Camera** to see the camera viewfinder.

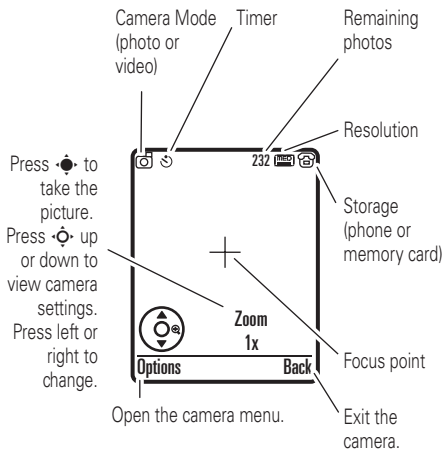

Note: The number of photos remaining is only an estimate.


2 Press the *centre key*  to take the photo in the viewfinder. You can:

- Press the **Options** key to store or discard the photo.


If you press **Options** > **Print**, you can print the picture over a Bluetooth™ connection (see page 27).

- Press the **Send** key to send the photo in a message.

Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press the **Yes** key to send the message.

- Press  to discard the photo and return to the active viewfinder.

Before you capture the photo, you can press **Options** to open the camera menu:

options	
Go To Pictures	See stored pictures and photos.
Go To Video Mode	Switch to the video camera.
Internal / External View	Switch to the camera facing you (Internal) or facing away from you (External).
Auto-Timed Capture	Set a timer for the camera to take a photo.
Camera Setup	Open the setup menu to adjust photo settings.
Switch Storage Device	Choose to store videos on your phone or a memory card. 

options	
Free Space	See how much memory remains. Note: Your service provider may store some content in user memory before you receive the phone.

self portrait

If you close your phone while the viewfinder is active, the external display shows the image. Press the volume keys to zoom, or press the smart key to capture and store the image.

videos

 
To view, edit, or delete videos you've recorded, see page 88.

Your camera lens is on the back of your phone, when your phone is open.

Note: Below your phone's external lens is a **camera on indicator**. This can blink when your camera is on, to let people around you know that they might be in your photo or video.




Press  >  **Video Camera** to see the video viewfinder.

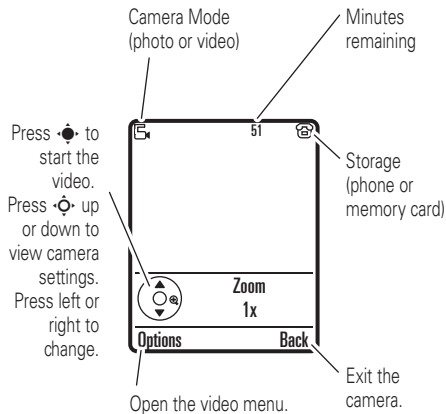



Note: The number of minutes remaining is an estimate.

Tip: If you want to send your video in a message, the video length must be set to **MMS**. To set length, press **Options > Video Camera Setup > Video Length**.


- 1 Press the *centre key*  to start recording the video in the viewfinder.
- 2 Press the **Stop** key to stop recording the video. You can:

- Press the **Options** key to preview, store, or discard the video.

To play a stored video from the home screen, press  >  **Multimedia** > **Media Finder** > **Videos** > **All Videos** > *video name*.


- Press the **Send** key to send the video in a message.



Enter text and press **Send To**, then scroll to a recipient address and press the *centre key*  to select it. Press the

Options key to enter a new number. To send the message, press the **Send** key.

Note: Some other phones or networks do not support messages with videos.

- Press  to discard the video and return to the active viewfinder.

video calls


If you call someone who has a 3G video phone, you can see each other while you talk. If your phone is roaming on a **non-3G network**, video calls will not work (see the Roam indicator on page 47).




Note: Below your phone's external lens is a **camera on indicator**. This can blink when your camera is on, to let people around you know that they might be in your photo or video.



make a video call

- 1 Enter a phone number.
- 2 Press  to make the call.

During the call:

- Press the **Stop Video** key to change the call to a voice call with the speakerphone on.
 - If you accept another **incoming voice call**, your phone changes this video call to a voice call.
 - If you accept another **incoming video call**, your phone ends this video call.
- 3 To end the call, press .

text messages

To create a group mailing list, see page 73.
For more message features, see page 75.

send a text message

A text message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message, and you can put text and media objects on each page. You can send a message to other compatible phones or to email addresses.



Find it: > Messages > Create Message > New Message

- 1 Press keypad keys to enter text on the page (for details about text entry, see page 48).

To insert a **picture, sound, or other object** on the page, press **Options > Insert**. Select the file type and the file.

To insert **another page** in the message, enter text or objects on the current page and press **Options > Insert > New Page**. You can

enter more text and objects on the new page.

- 2 When you finish the message, press the **Send To** key.
- 3 To **send** the message, press the **Send** key.

receive a text message

When you receive a message, your phone plays an alert, and the display shows **New Message** with a message indicator, such as .



Press the **Read** key to open the message.

To view see all of your text messages:

Find it: > Messages > Message Inbox

If a multimedia message contains media objects:

- Photos, pictures, and animations show as you read the message.

- A sound file plays when its slide shows. Use the volume keys to adjust the sound volume.
- Attached files are added to the end of the message. To open an attachment, scroll to the file indicator/filename and press the **View** key (image), **Play** key (sound), or **Open** key (phonebook vCard, calendar vCalendar entry, or unknown file type).

memory card

You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds).



Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in

your phone. You cannot send, copy, or change copyrighted files.

install or remove a memory card

 
1 Remove the battery door (see page 19).

2 To install the memory card, make sure the memory card's

metal contacts are facing down, and slide the top of the memory card under the metal band.

To remove the memory card, slide it back out of the holder.

3 Replace the battery door.

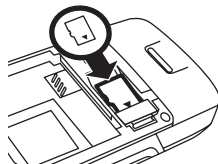

see and change memory card information

To **see the files** stored on your memory card and on your phone, open a file list, such as **Pictures** (see page 88). Icons can indicate if a file is stored in your phone memory (📁) or on your memory card (📁). To copy or move a file from your phone to your memory card, highlight it in the list and press **Options > Manage > Copy** or **Move > Memory Card**. You cannot copy or move some copyrighted files.

To **copy files** between your memory card and a computer, you can use a cable connection (see page 43) or a Bluetooth connection (see page 24).

To see your **memory card name, available memory**, and other information about the card:

Find it: 📶 > ⚙️ **Settings > Phone Status > Storage Devices**

 
- 1 Press 📶 to scroll to the memory card that is installed.
- 2 Press the *centre key* 📶 to see the memory card information. Your phone stores any content that you add, like ring tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

or

Press **Options** to see the **Storage Device** menu, which lets you **Format** or **Rename** the memory card.

cable connections

 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

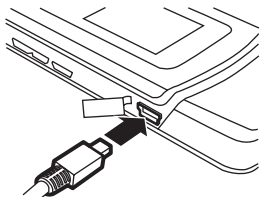

Note: Motorola Original USB data cables and supporting software may be sold separately. Check your computer or hand-held device to determine the type of cable you need. To make **data calls** through a connected computer, see page 82.



connect your memory card to a computer

You can use a cable connection to access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Disconnect the cable from your phone, if it is connected, then press  >  **Connection** > **USB Settings** > **Default Connection** > **Memory Card**.

This directs the USB connection to your memory card.

Connect the cable to your phone and to an available USB port on your computer. Then follow these steps:

On your computer:

- 1 Open your “My Computer” window, where your phone’s memory card shows as a “Removable Disk” icon.
- 2 Click on the “Removable Disk” icon to access the files on your phone’s memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows:
audio files: > mobile > audio
screen savers: > mobile > picture
wallpapers: > mobile > picture
video clips: > mobile > video
- 4 When you finish, disconnect your phone by selecting the “Safely Remove Hardware” icon in the system tray at the bottom of your computer screen. Then disconnect the “USB Mass Storage Device.”

- 5 Disconnect the cable from your phone and computer.

On your phone:

To return to **Data** as your USB default connection, press  >  **Connection** > **USB Settings** > **Default Connection** > **Data connection**.

phone updates

Sometimes we think of ways to make your phone’s software faster or more efficient after you’ve purchased your phone. You can find out if your phone can be updated and register for free update notifications at: <http://www.hellomoto.com/support/update>



 
Note: Software updates do not affect your phonebook entries or other personal entries. If you receive a software update but choose to install it later, see page 84.

basics


See page 1 for a basic phone diagram.


display


The *home screen* shows when you turn on the phone.

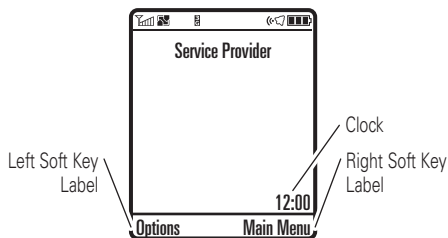


Note: Your home screen might look different from the one shown, depending on your service provider.



To dial a number from the home screen, press number keys and .

Press  up, down, left, or right in the home screen to open basic menu features.

 Press the *centre key*  to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

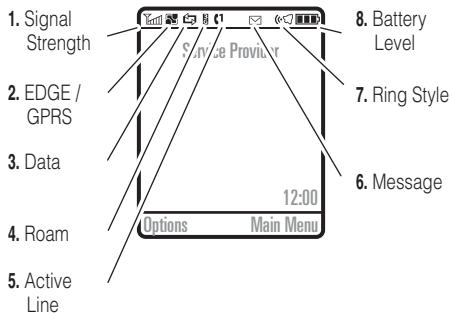Status indicators can show at the top of the home screen:


 



- 1 Signal Strength Indicator** – Vertical bars show the strength of the network connection. You can't make or receive calls when  or  shows.
- 2 EDGE/GPRS Indicator** – Shows when your phone is using a high-speed *Enhanced Data for GSM*









Evolution (EDGE) or *General Packet Radio Service* (GPRS) network connection.

Indicators can include:

-  GPRS PDP context active
-  EDGE
-  GPRS packet data available

- 3 Data Indicator** – Shows connection status.



-  secure packet data transfer
-  unsecure packet data transfer
-  secure application connection
-  unsecure application connection
-  secure *Circuit Switch Data* (CSD) call
-  unsecure CSD call

 *High-Speed Downlink Packet Access* (HSDPA) data transfer

 Bluetooth™ connection is active

4 Roam Indicator – Shows when your phone is seeking or using a network outside your home network. Indicators can include:



 2G home

 2G roam

 2.5G home

 2.5G roam

 3G home

 
 3G roam

HSDPA home

 HSDPA roam

HSDPA is *High-Speed Downlink Packet Access*, available on some networks.

5 Active Line Indicator – Shows


 to indicate an active call, or

 to indicate when call diverting is on.





Indicators for dual-line-enabled SIM cards can include:

  line 1
active

 line 1 active, call
divert on

 
 line 2
active


 line 2 active, call
divert on

When an alarm is activated,  can show here.

6 Message Indicator – Shows when you receive a new message. Indicators can include:



 text message

 voice message

7 Ring Style Indicator – Shows the ring style setting.


- | | |
|-------------|----------------------|
| 🔔 loud ring | 🔔🔊 vibrate & ring |
| 🔔 soft ring | 🔔🔊 vibrate then ring |
| 🔔 vibrate | 🔔 silent |

8 Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

text entry

Some features let you enter text.

 For indicator descriptions, see following section.

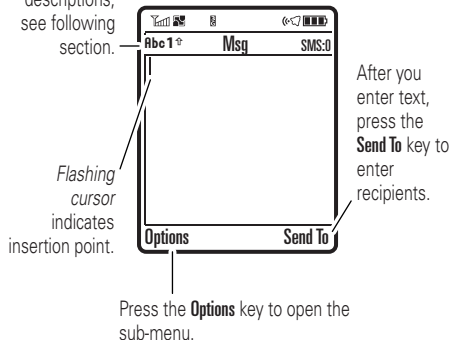

Press **[#]** in a text entry view to select an entry mode:

entry modes	
[1] or 1	Your Primary text entry mode can be set to any iTAP™ [1] or tap 1 mode.
[2] or 2	Your Secondary text entry mode can be set to any iTAP [2] or tap 2 mode, or set to None if you don't want a secondary entry mode.
123	Numeric mode enters numbers only.
@%	Symbol mode enters symbols only.

To set your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view and select **Primary Text** or **Secondary Text**.

iTAP™ and tap mode tips

- Press **[0]** in a text entry view to change text case to all capital letters

(**ABC**), no capitals (**abc**), or next letter capital (**Abc**).

 
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP or Tap mode.
- Press **[1]** to enter punctuation or other characters.
- Press **[⌂]** to move the flashing cursor to enter or edit message text.
- Press **[←]** to delete the character to the left of the cursor. Hold **[←]** to delete the word.
- To cancel your message, press **[⏏]** > **Abort Message**.

iTAP™ mode

Press **[#]** in a text entry view to switch to iTAP mode. If you don't see **[1]** or **[2]**, press **Options > Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

For example, if you press **[7] [7] [6] [4]**, your display shows:

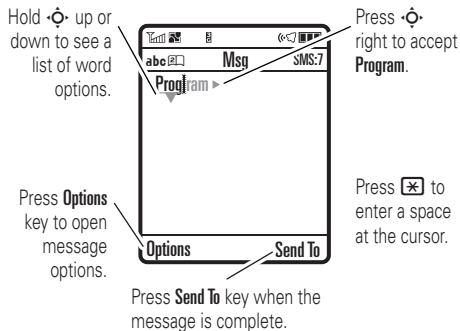

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.

Tip: Don't worry if you forget how iTAP works. In a text entry display, you can press

 
Options > **Text Setup** > **Text Tutorial** to see an explanation.

tap mode

Press **#** in a text entry view to switch to tap mode. If you don't see **Abc1** or **Abc2**, press **Options** > **Text Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in **Tap** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

For example, if you press **7** one time, your display shows:

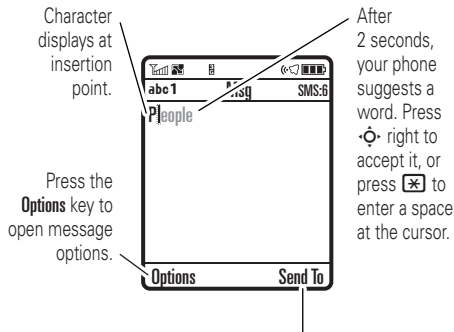

After you enter text, press the **Send To** key to enter recipients.


The first character of every sentence is capitalised. If necessary, press **[down arrow]** down to change the character to lowercase before the cursor moves to the next position.

numeric mode

Press **#** in a text entry view until you see **123**. Press the number keys to enter the numbers you want.

Shortcut: You can press and hold a number key to temporarily switch to numeric mode from iTAP™ or Tap modes. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.

 
symbol mode

Press **#** in a text entry view until your phone shows a list of symbols. Scroll to the symbol you want, then press the *centre key* .

volume

Press the volume keys to:

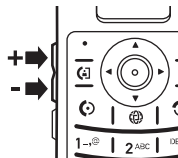

- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen

 


Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key while you are in the home screen. You can also switch to **Vibrate** or back by holding **#** in the home screen.



To change your ringer volume when your phone is closed, see page 53.

navigation key

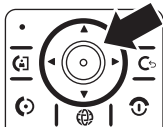Press the *navigation key*  up, down, left, or right to scroll to items in the display. When you scroll to an item, press the *centre key*  to select it.



smart key

The smart key gives you another way to do things. For example, when you scroll to a menu item, you can press the smart key to select it (instead of pressing the *centre key* ). The smart key usually does the same thing as pressing the *centre key* . To find the smart key, see page 1. To change what the smart key does in the home screen, see page 80.

external display

When you close your phone, the external display shows the date, status indicators, and notifications for incoming calls and other events. For a list of phone status indicators, see page 46.

set phone ring style in external display

- 1 Press a volume key to see **Ring Styles**.
- 2 Press the smart key repeatedly, until the style you want appears.
- 3 Press a volume key to return to the home screen.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **Options** key and select **Speakerphone On** to turn the handsfree speaker on. Your display shows **Speakerphone On** until you turn it off or end the call.


Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it:  >  **Settings** > **Security**
> **New Passwords**

You can also change your **SIM PIN** or call barring passwords.



If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:

Press  >  **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  >  **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 64). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

lock & unlock external keys

When your phone is closed, your external keys (the smart key, volume keys, and camera key) lock to prevent accidental key presses.

To change how long your phone waits before it automatically locks your external keys:

 >  **Settings** > **Security** > **External Key Lock** > **Timer** > *a time interval* or **Off**

Note: If you choose **Off**, you can still manually lock your external keys by holding the smart key.

To **unlock** your external keys, press **smart key** once, then hold the **smart key** (the key below your volume keys).

customise

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:


 **Loud**

 **Soft**

 **Vibrate**

 **Vibe & Ring**



 **Vibe then Ring**

 **Silent**

The ring style profile's indicator shows at the top of your home screen. To choose your profile:

Find it:  >  **Settings** > **Ring Styles**
> **Style:** *style name*

Shortcut: In the **home screen**, press the volume keys up or down to quickly change your ring style profile. With your **phone closed**, press a volume key to see your ring style profile, press the smart key to change it, then press a volume key to store the change.


Tip: Do you get a lot of text messages? If you don't want to hear incoming message alerts during phone calls, press  >  **Settings** > **In-Call Setup** > **MSG Alert** > **Not in Call**.

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it:  >  **Settings** > **Ring Styles**
> *style* **Detail**

Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Change** key to change it.
- 2 Scroll to the alert you want, then press the *centre key* .
- 3 Press the **Back** key to save the alert setting.

time & date

Your phone needs the time and date for the calendar.

To **synchronise** the time and date with the network: Press  >  **Settings**
> **Initial Setup** > **Time and Date** > **Autoupdate** > **On**. *



To **manually** set the time and date, turn off **Autoupdate**, then: Press  >  **Settings**
> **Initial Setup** > **Time and Date** > *time or date*.

To choose an **analog, digital, or no** clock for your home screen, press  >  **Settings**
> **Personalise** > **Home Screen** > **Clock**.


* Indicates network or subscription-dependent features

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Note: Your *theme* can also set your wallpaper (page 58).

Find it:  >  **Settings** > **Personalise** > **Wallpaper**

options	
Picture	Press  up or down to select a picture, or select None for no wallpaper.
Layout	Select Centre to centre the image in the display, Tile to repeat the image across the display, or Fit-to-screen to stretch the image across the display.


screen saver

Set a photo, picture, or animation as a screen saver. The screen saver shows when the flip is open and no activity is detected for a specified time.

Note: Your *theme* can also set your screen saver (page 58).

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.



Find it:  >  **Settings** > **Personalise** > **Screen Saver**

options	
Picture	Press  up or down to select a picture or animation, or select None for no screen saver.
Delay	Select the length of inactivity before the screen saver shows.

themes



A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more.



To **apply** a theme, press  >  **Multimedia** > **Themes** > *theme*.

To **download** a theme, see page 89.

To **delete themes you downloaded**, press  >  **Multimedia** > **Themes**, scroll to the theme, and press **Options** > **Delete**.

To **preview** a theme, press  >  **Multimedia** > **Themes**, scroll to the theme, and press **Options** > **Preview**.

display appearance

To choose a phone **skin** that sets the look and feel of your phone's display: Press  >  **Settings** > **Personalise** > **Skin**. Your *theme* can also set your phone skin (page 58).

To set your display **brightness**: Press  >  **Settings** > **Initial Setup** > **Brightness**.

To save battery life, your keypad **backlight** turns off when you're not using your phone. The backlight turns on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:

Press  >  **Settings** > **Initial Setup** > **Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press  >  **Settings** > **Initial Setup**
> **Display Timeout.**

answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Find it:  >  **Settings** > **In-Call Setup**
> **Answer Options**

options	
Multi-key	Answer by pressing any key.
Open To Answer	Answer by opening the flip.

calls


To make and answer calls, see page 21.

turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.



recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  from the home screen to see a list of dialled calls.



Find it:  >  **Recent Calls**, press  or  to select > **Dialled Calls**, **Received Calls** or **Missed Calls**

Scroll to a call. A ✓ next to a call means the call connected.

- To call the number, press .
- To see call details (like time and date), press the *centre key* .
- To see the **Last Calls Menu**, press **Options**. This menu can include:



options	
Store	Create a phonebook entry with the number in the No. field. Store does not appear if the number is already stored.

options	
Video Call	Make a video call to the number.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID / Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Send Voice Msg	Record and send a voice message to the number.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Filter by	Select dialled or received calls.

options	
Notepad	Open the number in a text editor.
Call Times*	Open your call time information. 
Call Cost*	Open your call cost information. 

* Indicates network or subscription-dependent features

redial

- 1 Press  from the home screen to see a list of recent calls.
- 2 Scroll to the entry you want to call, then press .


If you hear a **busy signal**, and you see **Call Failed**, you can press  or the **Retry**



key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.

return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Call(s)**, where **X** is the number of missed calls.

- 1 Press the **View** key to see the received calls list.
- 2 Scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID) shows the phone number for an



incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.


You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 72).

To show or hide **your phone number** from the next person you call, enter the phone number and press **Options > Hide ID/Show ID**.

emergency calls

Your service provider programs one or more emergency phone numbers, such as 999, or 112 that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.



Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**.

To **check** voicemail messages:

Find it:  >  **Messages** > **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

Note: You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then you can use the entry to call your voicemail.

other features

advanced calling

features

attach a phone number




Dial an area code or prefix for a phonebook number, then press **Options** > **Attach Number**.

features

notepad

Press  >  **Recent Calls**, press the **Options** key, then **Notepad**.

- To call the number, press .
- To create a phonebook entry with the number in the **No.** field, press the **Store** key.
- To open the **Dialling Menu** to attach a number or insert a special character, press **Options**.

features

international calls*



If your phone service includes international dialling, press and hold **[0]** to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

hold a call

Press **Options > Hold** to put all active calls on hold.

mute a call

Press the **Mute** key (if available) or **Options > Mute** to put all active calls on mute.

features

call waiting*



When you're on a call, you'll hear an alert if you receive a second call.

Press **[☎]** to answer the new call.

- To switch between calls, press the **Switch** key.
- To connect the two calls, press the **Options > Link** key.
- To end the call on hold, press **Options > End Call on Hold**.


To turn the call waiting feature on or off, press **⬇ > ⚙ Settings > In-Call Setup > Call Waiting > On or Off**.

features

conference call*




During a call:

Dial next number, press , press the **Options > Link** key.

transfer a call*



During a call:

Options > Transfer, dial transfer number, press 

automatic call diverting



Set up or cancel automatic call diverting:

 >  **Settings > Call Divert**



features

manual call diverting*



You can set your phone to divert an incoming call only when you press a key.

To set the number where your phone diverts the calls:

 >  **Settings > Call Divert > Push to Call Fwd No.**, and enter the phone number

To choose which key you press to divert incoming calls:

 >  **Settings > Personalise > Home Screen > Home Keys**, select one of the key presses in the list, and then select **Call Divert**

features

restrict calls*



Restrict outgoing or incoming calls:

 >  **Settings** > **Security** > **Restrict Calls**



Tell your phone to allow **All**, **None**, or only the calls from your **Phonebook**.

call barring*



Restrict outgoing or incoming calls:

Restrict your voice or video calls to block all calls, international calls, or all calls except ones on your home network.

 >  **Settings** > **Security** > **Call Barring**


 
features

fixed dial *



When you turn on fixed dialling, you can only call numbers stored in the fixed dial list.

Turn fixed dialling on or off:

 >  **Settings** > **Security** > **Fixed Dial**

Use the fixed dial list:

 >  **Tools** > **Dialling Services** > **Fixed Dial**

Note: Fixed dial is PIN2 password protected.

service dial *



Your service provider might give you phone numbers for taxi companies or other services. These phone numbers are stored on your SIM card. To see them:

 >  **Tools** > **Dialling Services** > **Service Dial**

features

quick dial*



Dial preprogrammed phone numbers:

> **Tools** > **Dialling Services** > **Quick Dial**

DTMF tones

Activate DTMF tones:

> **Settings** > **Initial Setup** > **DTMF**

To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press **Options** > **Send Tones**.

phonebook

features

assign a speed dial key to a phonebook entry

You can assign the keys **1** through **9** to phonebook entries. Then, when you press and hold a key, your phone calls the entry.

Note: Your service provider might assign some keys, such as **1** for your voicemail number. You can only speed dial the phonebook entries stored on your phone (not on your SIM card).

Press > **Phonebook** and scroll to the phonebook entry. Then, press **Options** > **Add to Speed Dial** and pick a speed dial key.



features



use the speed dial key for a phonebook entry

To **use a speed dial key** that you assigned to a phonebook entry, just press and hold the key while in your home screen.

edit or delete a phonebook entry

Edit a number stored in the phonebook:

 >  **Phonebook**, scroll to the phonebook entry, and press **Options**. You can select **Edit Contact**, **Delete Contact**, or other options.

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press  and  to see the entries you use frequently or entries in other categories.

features

set ringer ID for a phonebook entry

Assign a ring alert (ringer ID) to an entry:

 >  **Phonebook** > *entry*, then press **Options** > **Edit Contact** > **Ringer ID** > *ringer name*

Note: The **Ringer ID** option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 74.

Activate ringer IDs:

 >  **Settings** > **Ring Styles** > *style Detail* > **Ringer IDs**

features

set picture ID for a phonebook entry

Assign a photo or picture to show when you receive a call from an entry:

☎ > 📁 Phonebook > *entry*, then press
Options > Edit Contact > Picture > *picture name*

Note: The **Picture** option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 74.

set picture ID view for phonebook

Show entries as a text list, or with picture caller ID photos:

☎ > 📁 Phonebook, then press Options > Setup
> View by > *view name*

features

set category for a phonebook entry

☎ > 📁 Phonebook > *entry*, then press
Options > Edit Contact > Category > *category name*

Note: The **Category** option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 74.

When you open your phonebook, press
✳ or # to see your categories.

set category view for phonebook

☎ > 📁 Phonebook, then press Options
> Filter by > Category > *category name*

You can show **All** entries, entries in a predefined category (**General**, **Friends**, **Family**, **Work**), or entries in a category you create.

Shortcut: When you open your phonebook, press ✳ or # to see your categories.

features

create group mailing list

You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list:

☎ >  **Phonebook**, then press
Options > Create New > Message List

You can select the list name as an address for multimedia messages.

Note: A **Message List** cannot include entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 74.

sort phonebook list

Set the order in which entries are listed:


☎ >  **Phonebook**, then press
Options > Setup > Sort by > sort order

You can sort the phonebook list by **First Name** or **Last Name**.

features


copy one phonebook entry

Copy an entry from the phone to the SIM card, or from the SIM card to the phone:

☎ >  **Phonebook**, scroll to the entry, press
Options > Copy to SIM Card or **Copy to Phone**

copy multiple phonebook entries

Copy multiple phonebook entries between the phone and SIM card:

☎ >  **Phonebook**, scroll to one entry, press
Options > Select Multiple to, then select
Copy to SIM Card or **Copy to Phone**

features

send phonebook entry to another device

Send a phonebook entry to another phone, computer, or device:

☎ >  **Phonebook**, scroll to the entry, press **Options** > **Share** > **Contact**

For more information about copying files to another device, see page 25.

print phonebook entry over Bluetooth™ connection



You can use a Bluetooth wireless connection to send a phonebook entry from your phone to a printer.

☎ >  **Phonebook**

Scroll to the entry you want to print, and press **Options** > **Select Multiple to** > **Print**.

You cannot print a **Message List**. For more about Bluetooth connections, see page 24.

messages


For basic text message features, see page 39.

Your phone reads message settings from the USIM card. If you put another USIM card in your phone, your phone sends and receives messages for the phone number on the new card.

features

send email



☎ >  **Messages** > **Email** > **Create Email**

Note: To use email, you might need to enter a **User ID** and **Password** in your email settings (see page 78).

features

send voice message



•◂◃• > ✉ Messages > Create Message
> New Voice Msg

To record the voice message, press the **Record** key, speak, then press the **Stop** key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to receive the message.

use a message template



•◂◃• > ✉ Messages > Templates
> Text Templates or Multimedia Templates

Select a template to create a new message based on the template.

features

read and manage messages



•◂◃• > ✉ Messages > Message Inbox

Icons next to each message indicate if it is read ✉ or unread ✉. Icons can also indicate if the message is locked 🔒, urgent !, or if it has an attachment 📎.

To **Reply**, **Forward**, **Lock**, or **Delete** a message, scroll to it and press **Options**.

To open a message, press •◂◃•. Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.

features

read and manage email



•◂◃• > ✉ Messages > Email

To **Reply**, **Forward**, **Lock**, or **Delete** a message, scroll to it and press **Options**.

To open a message, press •◂◃•. Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.

store message objects



Go to a multimedia message page, or scroll to an object in a message, then:

Options > Store

features

print message over Bluetooth™ connection



You can use a Bluetooth wireless connection to send a message from your phone to a printer.

•◂◃• > ✉ Messages > **Message Inbox**, **Email**, **Outbox**, or **Drafts**

Scroll to the message you want to print and press **Options > Print**.

You cannot print message **Templates**. For more about Bluetooth connections, see page 24.

features

store text messages on your SIM card



To store incoming text messages on your SIM card, press:

• > **Messages**, then press **Options > Setup > Message Setup > Text Msg Setup > Default Storage > SIM Card**

features

edit email settings



You can edit the settings for your Email connections. To use email, you need to store your email **User ID** and **Password**.

• > **Messages**, then press **Options > Setup > Email Msg Setup > Account Settings**

If you have more than one email account, select an account to edit.

Your phone shows a list of email settings. Here is where you store your email **User ID** and **Password**.

Note: To create a new account, select **New Entry** in the **Account Settings** list. Your display shows a folder for each email account under
• > **Messages > Email**.

features

browser messages *



Read messages received by your micro-browser:

> **Messages** > **Browser Messages**

info services*



Read subscription-based information services messages:

> **Messages** > **Info Services**

* Indicates network or subscription-dependent features

personalising

features

language

Set menu language:

> **Settings** > **Initial Setup** > **Language**

scroll

Set the scroll bar to **Up/Down** or **Wrap Around** in menu lists:

> **Settings** > **Initial Setup** > **Scroll**

text marquee



Set the speed for scrolling text in your display:

> **Settings** > **Initial Setup** > **Text Marquee**

features

activate ringer IDs

Activate ringer IDs assigned to phonebook entries and categories:

•📱 > ⚙️ Settings > Ring Styles > *style* Detail
> Ringer IDs

ring volume

•📱 > ⚙️ Settings > Ring Styles > *style* Detail
> Ring Volume

keypad volume

•📱 > ⚙️ Settings > Ring Styles > *style* Detail
> Key Volume

reminders

Set reminder alerts for messages that you receive:

•📱 > ⚙️ Settings > Ring Styles > *style* Detail
> Reminders

features

menu view

Show the main menu as graphic icons or as a text-based list:

•📱 > ⚙️ Settings > Personalise > Main Menu > View

main menu

Reorder your phone's main menu:

•📱 > ⚙️ Settings > Personalise > Main Menu
> Reorder

change home keys*



•📱 > ⚙️ Settings > Personalise
> Home Screen > Launch Bar

master reset

Reset all options **except** unlock code, security code, and lifetime timer:

•📱 > ⚙️ Settings > Initial Setup > Master Reset

features


master clear

Caution: Master clear **erases all information you have entered** (including phonebook and calendar entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

 >  Settings > Initial Setup > Master Clear

* Indicates network or subscription-dependent features

call times & costs*

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.



The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.










features

call times



Show call timers:


 >  Recent Calls, press the **Options** key, then **Call Times**










features	
in-call timer 	
<p>Show time or cost information during a call:</p> <p> >  Settings > In-Call Setup > In-Call Timer</p>	
in-call date and time display 	
<p>Show the current date and time during voice calls:</p> <p> >  Settings > In-Call Setup > Date and Time</p>	
call cost 	
<p>Show call cost trackers:</p> <p> >  Recent Calls, press the Options key, then Call Cost</p>	

* Indicates network or subscription-dependent features

handsfree



Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features
speakerphone 
<p>Activate the speakerphone during a call:</p> <p>Press the Speaker key (if available), or Options > Speakerphone On.</p>

features	
auto answer (car kit or headset) Automatically answer calls when connected to a car kit or headset:  >  Settings > Car Settings or Headset > Auto Answer	
voice dial (headset) Enable voice dial with headset send/end key:  >  Settings > Headset > Voice Dial	
auto handsfree (car kit) Automatically route calls to a car kit when connected:  >  Settings > Car Settings > Auto Handsfree	

data calls*

To connect your phone with a USB cable, see page 42.

features	
send data Connect your phone to the device, then place the call through the device application.	
receive data Connect your phone to the device, then answer the call through the device application.	

features

setting up Exchange ActiveSync



You can use the Internet to synchronise your phone's phonebook and calendar entries with an email account on a Microsoft® Exchange 2003 Server.

You need to know the email account's **user name** and **password**, the Microsoft® Exchange **server name**, and the **user domain name**. Confirm that the **Mobility** option is enabled on the email account, and that **data service** is activated with your phone service provider.

features







using Exchange ActiveSync

Once you set up an Exchange ActiveSync partner, you can schedule your phone to synchronise with the account automatically.

To schedule synchronization, press  >  **Connection** > **MOTOSYNC** > **Exchange**, press the **Options** key, then > **Auto Sync Setup**. Enter the time and days you want your phone to synchronise.




* Indicates network or subscription-dependent features

network

features	
network settings*	
See network information and adjust network settings:	
 >  Settings > Network	
software update*	
Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to download it and install it later. To install a software update you downloaded:	
 >  Settings > Phone Status > Software Update	

* Indicates network or subscription-dependent features

personal organiser

features
set alarm
 >  Tools > Alarm Clock
turn off alarm
When an alarm happens: To turn off the alarm, press the Disable key or  . To set an eight-minute delay, press the Snooze key.
Note: The Snooze key is available only if the phone is already powered on when the alarm sounds.

features

add new calendar event or task

Your calendar can store events (with a start and end time that can repeat) or tasks (with a due date).

•◂ >  **Tools** > **Calendar**, scroll to the day, press •◂, press **Options** > **Create New Event** or **Create New Task**

see calendar event or task

See or edit event or task details:

•◂ >  **Tools** > **Calendar**, scroll to the day, press •◂

Tip: Keeping up with life can be tough work. To see a list of your upcoming events or tasks, open the calendar and press **Options** > **View** > **Organised Events** or **Organised Tasks**.

features

change calendar settings

•◂ >  **Tools** > **Calendar**, then press **Options** > **Setup**

You can choose the **Default View** that appears when you open your calendar, and you can show or hide the **Tasks On Day View**. You can tell your phone to **Power On** if it is turned off when a calendar alert occurs. Turn on **Lunar Calendar** if you do not want to use a solar calendar.


event reminder

When an event reminder happens:
To see reminder details, press the **View** key.
To close the reminder, press the **Back** key.

features

send calendar event to another device

Send a calendar event to another phone, computer, or device:

••• >  **Tools** > **Calendar**, scroll to the day, press •••, scroll to the event, press **Options** > **Send**

print calendar month, week, or day over Bluetooth™ connection

You can use a Bluetooth wireless connection to send a calendar month, week, or day from your phone to a printer.

••• >  **Tools** > **Calendar**

Go to the month, week, or day view and press **Options** > **Print**.

For more about Bluetooth connections, see page 24.

features

create voice record


••• >  **Multimedia** > **Voice Record**

Press •••. When prompted, speak into the phone.

Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.

play voice note

Play back a voice note:


••• >  **Multimedia** > **Media Finder** > **Voice Notes** > **All Voice Notes** > *voice note*

calculator

••• >  **Tools** > **Calculator**

features

currency converter

•◉ >  Tools > Calculator, then press
Options > Exchange Rate

Enter exchange rate, press the **OK** key, enter
amount, and press **Options > Convert Currency**.


security

features

SIM PIN

Caution: If you enter an incorrect PIN code
three times before the correct code, your
SIM card is disabled and your display shows
SIM Blocked.

Lock or unlock the SIM card:




•◉ >  Settings > Security > SIM PIN

features

lock feature

•◉ >  Settings > Security > Lock Application

fun & games

Note: Icons next to a picture, sound, or other
object can indicate if the file is locked () , or
if it is stored on your phone () or on your
memory card () .



For basic information on the camera, see page 34.

features

view, delete, or manage pictures

Manage photos, pictures, and animations:

 >  **Multimedia** > **Media Finder** > **Pictures**
> **All Pictures**

 

To **copy or move** a file from your phone memory () to memory card () , highlight it in the list and press **Options** > **Manage** > **Copy or Move** > **Memory Card**. You cannot copy or move some copyrighted files.



features

view, delete, or manage video clips

 >  **Multimedia** > **Media Finder** > **Videos**
> **All Videos**

To **copy or move** a file from your phone memory () to memory card () , highlight it in the list and press **Options** > **Select Multiple to** > **Copy or Move** > **Memory Card**. You cannot copy or move some copyrighted files.





start micro-browser



Just press .

Your phone reads micro-browser settings from the USIM card. When you remove the USIM card, your phone clears the browser cache. To edit your settings, press


 >  **WebAccess** > **Web Sessions**.

features

download objects from Web page



Download a picture, sound, or other object from a Web page:

Press , go to the page that links to the file, scroll to the link, and select it.

Web sessions



A *Web Session* stores settings that your phone uses to access the Internet. To select or create a Web session:

 >  **WebAccess** > **Web Sessions**

clear micro-browser history



Clear the micro-browser's history, cache, or cookies:


 >  **WebAccess** > **Browser Setup**
> **Clear History**, **Reset Cache**, or **Clear Cookies**

features

download game or application






You can download a Java™ game or application the same way you download pictures or other objects:

Press , go to the page that links to the file, scroll to the link, and select it.

start game or application



Start a Java™ game or application:

 >  **Games & Apps**, scroll to the game or application, press the *centre key* .

Note: To install and run games stored on your memory card, press

 >  **Games & Apps** > **[Install New]**.

features

aeroplane mode

You can switch your phone to aeroplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an aeroplane, without interfering with aeroplane communications.

•◑ >  **Settings > Aeroplane Mode
> Aeroplane Mode > On**

You can make the aeroplane mode option appear whenever you turn on your phone:

•◑ >  **Settings > Aeroplane Mode
> Prompt At Startup > On**

MyMobileSoft.com

Introduction

MyMobileSoft.com¹ provides download of both free and paid software for your Motorola handset. Depends on each model, you may download games, ring tones, screen savers, wall papers, e-books, financial and others software from MyMobileSoft.com.


1. All software and applications contained on MyMobileSoft.com are third party products and provided as is. Motorola or its subsidiaries make no representations or warranties, expressly or impliedly. By way of example but not of limitation, Motorola or its subsidiaries make no representations or warranties of merchantability or fitness for a particular purpose, or that the use of the software and applications will not

infringe any intellectual property rights. Motorola or its subsidiaries shall not be liable for any damages of any kind arising out of or relating to the use or inability to use the software and applications and services thereof. Amendment and availability of these software and applications are subject to change without any prior notice.

For more information, please visit the internet website:

www.mymobilesoft.com

Access to MyMobileSoft.com²

Press  > **Web Shortcuts**

OR

Press  > **WebAccess** > **Go To Page**

- **MotoMusic**
(<http://www.MotoMusic.com.hk>)

- **MyMobileSoft Download Fun**
(<http://hk.mymobilesoft.com>)
- **MyMobileSoft Mobile Portal**
(<http://mobile.mymobilesoft.com>)

This link guides you to the service of MyMobileSoft.com, which provides software and applications for your newly bought Motorola Mobile Phone.

2. You need to subscribe WAP service from your local operators, please make sure that you set up your handset correctly with appropriate parameters provided by your local operators.

www.mymobilesoft.com

Unlimited surprises waiting for you to download

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.45 W/kg.¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is 1.13 W/kg.¹

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the *Safety and General Information* section about body worn operation.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

index

A

- accessories 17, 79
- active line indicator 46
- aeroplane mode 88
- alarm clock 82
- alarm indicator 46
- alert
 - set 51, 52, 55, 56
 - turn off 51, 55, 60
- animation 86
- answer a call 21, 59
- attach a number 61, 64
- audio player 30

B

- backlight 58
- battery 20

- extending battery life 19
- battery indicator 47
- battery life, extending 57, 58
- Bluetooth connection
 - calendar entry, printing 84
 - calendar entry, sending 84
 - description 24
 - indicator 25, 30
 - messages, printing 74
 - phonebook entries 72
 - restricting access 29
- brightness 58

- browser messages 76
- browser. See micro-browser

C

- cables 42
- calculator 84
- calendar 83
- call
 - answering 21, 59
 - barring 53, 67
 - diverting 66
 - end 21
 - ending 21, 38
 - making 21
 - timers 78, 79
 - waiting 65

call divert indicator 46
caller ID 61, 62, 70
camera 34
camera key 1
car kit 79
categories 70
centre key 52
centre select key 17
clear/back key 1
clock 56
codes 53
conference call 66
copy files 25
costs, tracking 79

D

data call 80
data indicator 45
date, setting 56
dial a phone number 21,
67, 68

dialled calls 60
digital audio 30
display 3, 44, 58
divert calls 66
downloaded files
 from Web pages 87
 in messages 74
DTMF tones 68

E

earpiece volume 51
EDGE indicator 45
email
 reading and managing
 74
 sending 72
 settings 75
emergency number 62
end a call 21, 38
end key 1, 21

Enter Unlock Code
 message 53
external display 36, 52

F

fax call 80
fixed dial 67
flip 21, 59

G

games 87
GPRS indicator 45
group mailing list 71

H

handsfree speaker 53
headset 79
hold a call 65
home screen 3, 44, 77

I

in-call indicator 46
Incoming Call message 62
information services 76
international access code 65
iTAP text entry mode 49

J

Java applications 87

K

keypad 59, 77

L

language 76
linking. See Bluetooth connection
lock

application 85
phone 53

SIM card 85

Low Battery message 47

M

make a call 21
master clear 78
master reset 77
Media Finder 30
memory card 40
menu 3, 17, 44, 76, 77
menu icons 44, 77
message 73, 75
message alerts 55
message indicator 39, 46
message reminders 77
micro-browser 76, 86, 87

Missed Calls message 62

MMS, defined 39

MP3 sound files 30, 32

multimedia message 38, 73, 75

mute a call 65

N

navigation key 17, 52
network settings 82
notepad 64
number. See phone number
numeric entry mode 51

O

object exchange 25
open to answer 59
optional accessory 17
optional feature 17

P

pairing. See Bluetooth connection
passwords. See codes
personalise 76
phone number 23
phonebook 61, 64, 68, 69
photo 34, 86
picture 86
picture ID 62, 70
PIN code 21, 53, 85
PIN2 code 53
play music with phone closed 31
power key 1, 21
printing 27

Q

quick dial 68

R

received calls 60
recent calls 60
redial 61
reminders 77
restrict calls 67
return a call 62
ring style indicator 47
ring style, setting 51, 52, 55
ringer ID 62, 69, 77
ringer volume 51, 77
roam indicator 46

S

safety information 9
screen saver 57
scrolling 76
security code 53
send key 1, 21
service dial 67

signal strength indicator 45
SIM Blocked message 21, 85
SIM card 18, 21, 53, 67, 75, 85
skin 58
smart key 1, 32, 52, 77
soft keys 1, 44, 77
software update 82
speakerphone 79
speed dial 68, 69
store your number 23
symbol entry mode 51
synchronising 81
synchronizing 81

T

tap text entry mode 50
telephone number. See phone number

- text entry 47
- text marquee 76
- text message 73, 75
- themes 58
- time, setting 56
- timers 78, 79
- transfer a call 66
- turn on/off 21

U

- unlock
 - application 85
 - phone 21, 53
 - SIM card 85
- unlock code 53
- USB cables 42

V

- video call key 1
- video clip 86
- videos 37

- voice commands 32
- voice dial 80
- voice message 73
- voice note 84
- voice recognition 32
- voice record 84
- voicemail 63
- voicemail message
 - indicator 46, 63
- volume 51, 77
- volume keys 1, 31

W

- wallpaper 57
- Web pages 86
- Web sessions 87

Y

- your phone number 23

www.motorola.com.hk



Please use Motorola Original Accessories



6887460Z46

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc.®
Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners.
©2007 Motorola, Inc. All rights reserved.

Printed in PRC.